



NEC– how to change the ringing volume

1. Press: SPEAKER
2. Press: 60 then 1
3. Hold: 'up' or 'down' to adjust the ringing volume
4. Note: Press 'up' or 'down' during conversation to adjust handset / speaker volume

Plexus Communications hopes that this information is of value to you. Please contact us for any additional advice regarding your Telephone Systems and Telecommunications requirements. We specialize in the supply and installation of Telephone Systems from Major Brands such as Samsung, NEC Alcatel and Aristel as well as a range of quality Commander Systems. We provide and a range Voicemail Solutions from Samsung Telephone Systems, NEC Telephone Systems, Alcatel Telephone System and Aristel Telephone Systems, Conference Phones , Headsets from Plantronics and GN Netcom as well a range of discount telephone calls to local , National. International and calls to mobiles destinations.

Call Plexus for further information 1300 302 276